

DATA SHEET

Model N° HH10-0719



10 inch Hand Held Tablet

Software	Windows 10 Pro Microsoft
Dimensions	9.65" x 6.90" x 0.33" (245 mm x 175 mm x 8.30 mm)
Weight	1.15 lbs (522g)
Storage3	eMMC drive: 64 GB, or Solid-state drive (SSD)
Display	Screen: 10" PixelSense™ Display Resolution: 1800×1200 (217 PPI) resolution Aspect ratio: 3:2 Contrast ratio: 1500:1 Touch: 10-point multi-touch Corning® Gorilla® Glass 3
Battery Life	Wi-Fi: Up to 9 hours of video playback
Processor	Intel® Pentium® Gold Processor 4415Y
Security	TPM 2.0 for enterprise security Enterprise-grade protection with Windows Hello face sign-in
Memory	4GB RAM
Wireless	WiFi: IEEE 802.11 a/b/g/n/ac compatible Bluetooth Wireless 4.1 technology
Connections	1×USB-C, 3.5 mm headphone jack, microSDXC card reader
Cameras, video and audio	5.0MP front-facing camera with 1080p Skype HD video 8.0 MP rear-facing autofocus camera with 1080p HD video Single microphone 2W stereo speakers with Dolby® Audio™ Premium
Graphics	Intel® HD Graphics 615
Exterior	Casing: Magnesium Colour: Silver Physical buttons: Volume, Power
Sensors	Ambient light sensor Accelerometer Gyroscope Magnetometer
Warranty	1-year limited hardware warranty
Network	Nano SIM Tray 4G LTE Advanced (Bands 1, 2, 3, 4, 5, 7, 8, 12, 13, 17, 19, 20, 25, 26, 28, 29, 30, 38, 39, 40, 41, 66) GPS/GLONASS: Standalone and assisted GNSS, accuracy up to 3 meters

Power supply

Follow the guidelines to avoid fire, electrical shock, or other damage.

■ Power Cord

Use only the authorised power source (220—240V AC) for the machine.

Use only the power cord included with the machine.

Do not handle the power cord or plug if your hands are wet.

Do not overload the electrical outlet with too many appliances or plug the power cord into a damaged electrical outlet.

Do not cut, damage, alter or place heavy objects on the power cord.

Do not use the power cord if it is damaged.

Ensure the power cord is correctly inserted onto the electrical outlet.

Do not pull the power cord when removing the power plug from the electrical outlet. Doing so could cause an electric shock or fire.

Do not bend, break or damage the cord in any way, as this may result in an electrical shock, fire or a machine malfunction.

Regularly remove the power plug from the electrical outlet, and clean the base of the pins and between the pins. If you leave the power plug in the electrical outlet for an extended period of time, dust will accumulate at the base of the power plug pins. This could cause a short circuit that may result in a fire.

DATA SHEET

Model N° HH10-0719

Cleaning & Maintenance

Top Tip's for Keeping Your Desktop product Brand Spanking New!

Dust with a clean, damp cloth or chamois, wiping gently. A damp cloth cuts down on friction, helping reduce static electricity, which holds the dust

For the screen - To clean the screen on the tablet, use a soft, lint-free cloth.

TIP We suggest microfiber cloths. Never use a paper towel or other paper-based towels as they can leave scratches on the screen.

Warranty

12 months warranty does not include damage sustained through misuse, abuse or accidental damage.

This warranty does not affect your statutory rights.